



**Notes:**

1. Sealed disconnecter gully's must be vented. Disconnecter gully caps must be removable for sampling purposes.
2. The interceptor and baffle shall be constructed from a material that is suitable for the quality of waste.
3. Polyvinyl chloride (PVC) shall not be used for the construction of this interceptor or its associated vent pipe.
4. Airtight cover (using lever type clips) to be provided to interceptor and vent to be extended to open air in accordance with the relevant plumbing regulations.
5. The interceptor must be constructed, installed and connected in accordance with the relevant plumbing regulations.
6. This interceptor may accumulate quantities of explosive and / or inflammable materials and therefore care must be exercised in the maintenance and general use.
7. Minimum water capacity of the tank below the invert of the outlet is 100 litres or as otherwise specified in the Trade Waste Contract.
8. The interceptor must be located in a position to provide ready access for maintenance and inspection purposes.
9. Where the interceptor is to be located below ground level a Petrol and Oil Interceptor shall be installed.